

okamura

OKAMURA CORPORATION

INTERNATIONAL SALES & MARKETING DIVISION  
2-14-27, Akasaka, Minato-ku, Tokyo 107-0052, JAPAN  
Tel : +81-3-5561-4085 Fax : +81-3-5561-4086  
<http://www.okamura.jp/>

G98197  
2013-10



# *Sabrina*

## *Standard*

Office Seating

Instructions for Use

okamura

## Safety Instruction (Keep this operation manual)

### Symbol indications

Various symbol marks are used in this instruction manual and displayed on the products to show correct and safe usage and to avoid harm to you and others or damage to property. Please understand those before reading the main text of this manual.



User must follow this instruction to prevent from accidents and injuries, or damages to their property.

### Caution

#### ● Do not handle roughly, or use improperly.

- Do not use as a carrier.
- Do not stand on the chair or sit on the front side of seat or armrest.




#### ● Do not disassemble or repair on your own. Please contact our official dealers when needed.



#### ● No remodeling. Okamura will have no responsibility for any disadvantage caused by remodeling.

#### ● Gas lift replacement and handling should only be carried out by the trained personnel.

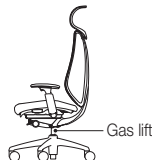


#### ● Casters

- For hard floors made of ceramic, stone, tile or wood, use soft.
- For soft floors using carpet or rug, use hard casters.
- Color identification of wheel --- Hard caster : Black, Soft caster : Gray.




#### ● Be careful not to get your fingers, hand or clothes caught in the gaps between the moving parts or the back of the pad when adjusting the position of the arm. Also, make sure that the arm are fixed tightly before use.

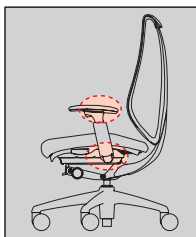

## Installation

Please follow instructions below. Failure may cause serious damage to the product.

 Indoor use only.



No outdoor or waterfront use.



Avoid direct sunlight.



When placing alongside windows, use curtain or blind to avoid from direct sunlight.



Avoid high temperature, high humidity, or extraordinary aridity.



Do not place product under heater or air-conditioner exhausting high temperature air.



Do not place on uneven floor.




## For maintenance
 
#### ● Regular maintenance is tips for long-life use.

#### ● If found unstable due to loose bolts and screws, tighten them.

#### ● For daily care, use a well-wrung soft cloth.

#### ● For stained part, use neutral detergent (1-3%) and completely remove detergent with dry soft cloth.



#### ● For mesh and cushion parts, remove dust by tapping the cloth surface with brush or using vacuum cleaner.


#### ● Cushion part cannot be dry-cleaned so that replacing is recommended if exceptionally dirty.



## Part names






## Adjustable range

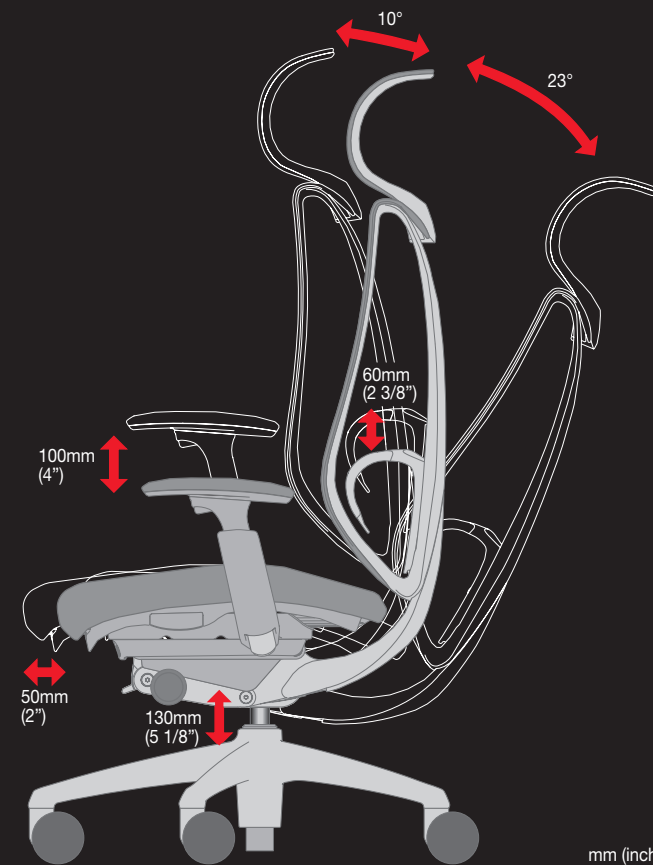

\* The headrest, lumbar support, and adjustable arms are options.

### Seat height adjustment

Adjust the seat height using the seat height adjustment lever on the bottom right of the seat. The seat will be lowered if you lift the lever while seated, and it will stop at any position you release the lever at. The seat will be raised if you lift the lever while not seated on the seat.

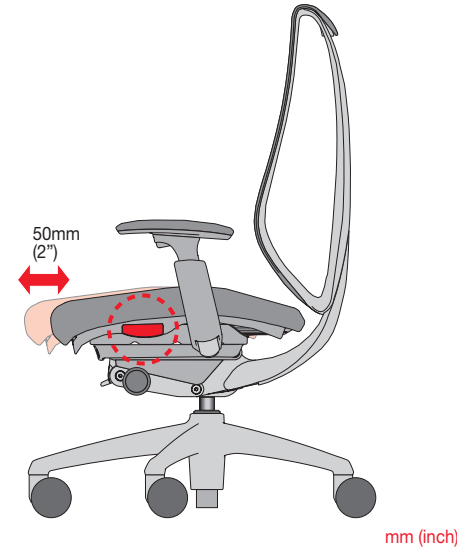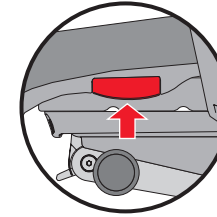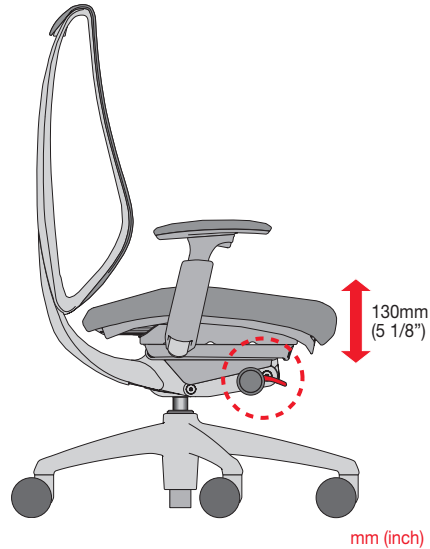



### Seat depth adjustment

Adjust the seat depth by sliding the seat forward or back within a range of 50 mm (2") using the Seat slide lever on the bottom left of the seat. This allows for maintaining an appropriate distance between the back and the front edge of the seat, reducing pressure on the back of the knees and providing reliable support for the lower back.



### Reclining adjustment

Before adjusting the backrest recline, release the lock by using the reclining lock/release dial on the bottom left of the seat. Set the dial to (B) to recline the backrest. If you want to adjust the backrest recline to the front position, set the dial to (A). In (A), you can also adjust the backrest recline to the back position. To lock the backrest recline, turn the dial clockwise once. After locking the backrest recline, you can release it by turning the dial counterclockwise once, and leaning against the backrest lightly.

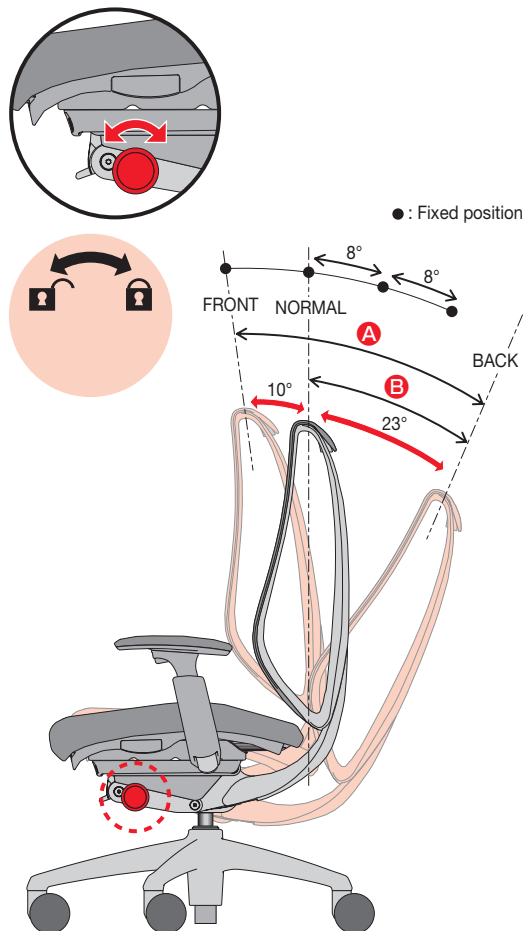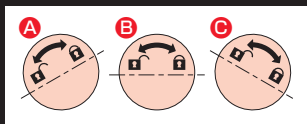


### Dial position to lock and release the backrest recline

Turn the reclining lock/release dial to the (A), (B), or (C) position to lock and release the backrest recline.

#### Backrest recline to the FRONT position

- (1) Turn the dial to (A) to release the lock.
- (2) Move the backrest recline to the FRONT position.  
You can also move the backrest recline to the BACK position.
- (3) Turn the dial to (B) to lock the backrest recline.  
If you move the backrest recline to the BACK position in step 2, turn the dial to (C) to lock.


\* If you want to release the lock again, turn the dial counterclockwise once, and lean against the back lightly.

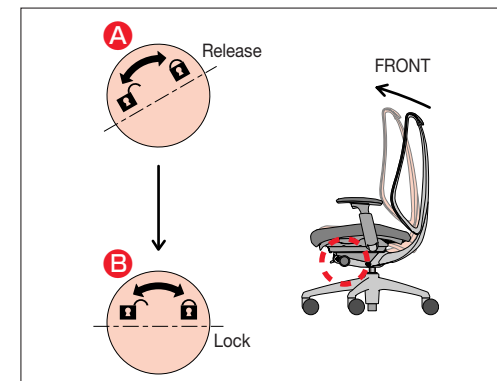

#### Backrest recline to the BACK position

- (1) Turn the dial to (B) to release the lock.  
If the dial is already set to (B), turn it to (A).
- (2) Move the backrest recline to the BACK position.
- (3) Turn the dial to (C) to lock the backrest recline.






\* If you want to release the lock again, turn the dial counterclockwise once, and lean against the back lightly.

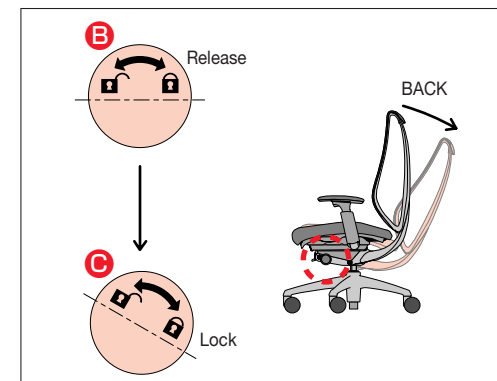

### Reclining tension adjustment

Adjust the reclining tension by using the reclining tension adjustment dial on the bottom right of the seat.

The tension to the backrest will be increased if you turn the dial clockwise (+), and the tension will be decreased if you turn the dial counterclockwise (-). Adjust it so that it is comfortable.

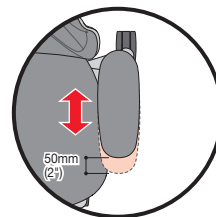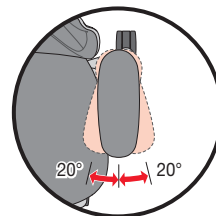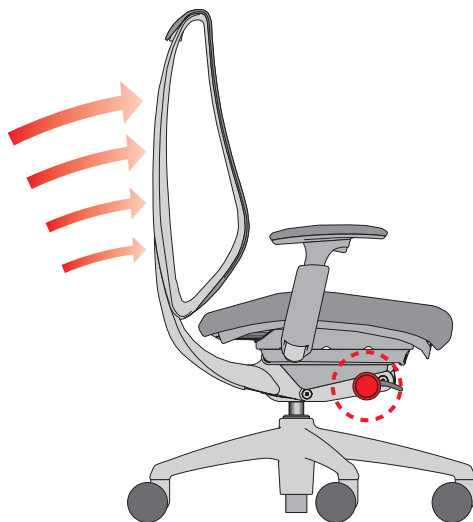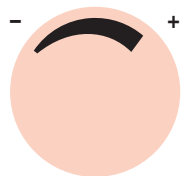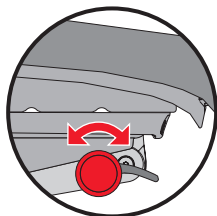


mm (inch)

### Adjustable arm (option) height adjustment

Release the height lock using the arm height adjustment button on the bottom of the arm pad. The arm height can be adjusted up and down within a range of 100 mm (4") by pushing and holding the button. Lock again by releasing the button. Holding the arm pads and rotating them left and right allows for adjustment of their angles (20° inside, 20° outside). They can also be adjusted forward and back within a range of 50 mm (2").



#### Note

Before using this product, make sure that the position is securely locked after making the adjustment.

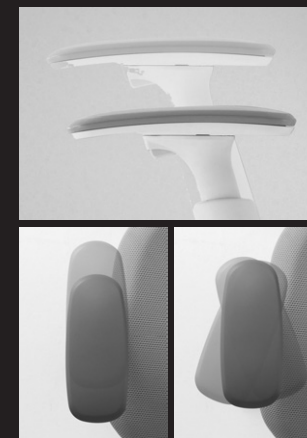

### Lumbar support (option) height adjustment

Move the Lumbar support on the back side of the backrest, up and down directly. The Lumbar support can be moved up and down within a range of 60 mm (2 3/8").

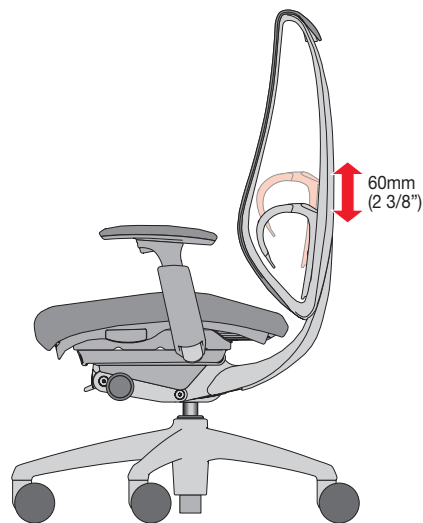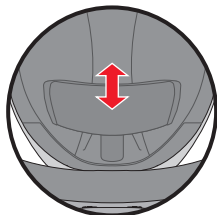


mm (inch)



### Headrest (option) attachment and replacement

- (1) Insert the grooves of the Headrest into the backside of the backrest.
- (2) Secure it with a fastening bolt.


\* Make sure that the Headrest is secured completely before using.

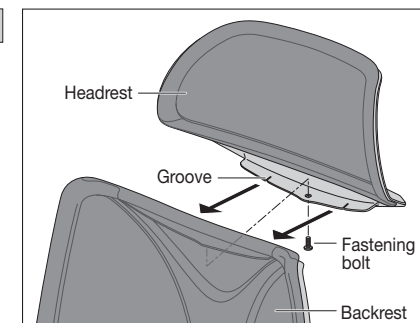

### Hanger (option) attachment and replacement


- (1) Insert the tabs of the Hanger into the backside of the backrest.
- (2) Secure it with a fastening bolt.

\* Make sure that the hanger is secured completely before using.

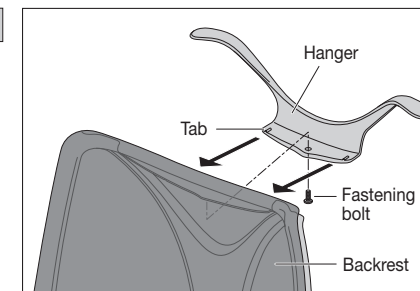

### Headrest (option) and Hanger (option) attachment and replacement

The Headrest and Hanger can be attached at the same time as shown in the illustration. Attach the Headrest first, and then attach the Hanger.

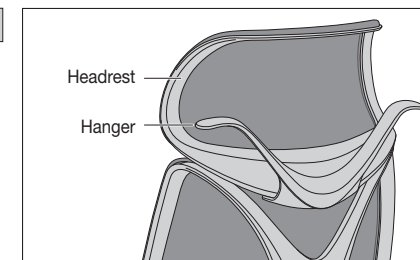

| Materials         |              |                |                                    |
|-------------------|--------------|----------------|------------------------------------|
| Part              |              |                | Materials                          |
| Structural parts  | Backrest     | Body           | Glass-reinforced polyamide >PA-GF< |
|                   |              | Frame          | Metal (aluminum) >ADC<             |
|                   | Seat         | Shell          | Polypropylene >PP<                 |
|                   |              | Frame          | Metal (steel)                      |
|                   | Support base |                | Glass-reinforced polyamide >PA-GF< |
|                   |              |                | Metal (aluminum) >ADC<             |
|                   | Legs         |                | Metal (aluminum) >ADC<             |
|                   | Options      | Adjustable arm | Polyurethane >TPU<                 |
|                   |              |                | Glass-reinforced polyamide >PA-GF< |
|                   |              | Lumbar support | Polyurethane >TPU<                 |
|                   |              |                | Polyamide >PA<                     |
| Headrest          |              |                | Glass-reinforced polyamide >PA-GF< |
|                   | Hanger       | Polyamide >PA< |                                    |
| Covering material | Mesh         |                | Polyester                          |
|                   | Cloth        |                | Polyester                          |
| Cushion material  | Seat         |                | Polyurethane >PUR<                 |

\* > XX < indicates the materials of the parts. This information is useful for recycling.

\* Please understand that product specifications might change without prior notification due to improvements made to the product.

| Troubleshooting                     |   |  |      |
|-------------------------------------|---|--|------|
| Problem                             | Check   | Solution   | Page |
| The seat cannot be lifted up.       | Are you sitting on the seat when adjusting the seat height?                 | Adjust the seat height while not seated on the seat.                     | 5    |
|                                     | Is the seat height in its highest position?                                 | The seat cannot be lifted up beyond the highest position.                | 5    |
| The seat cannot be lowered.         | Are you sitting on the front edge of the seat?                              | Sit in the center of the seat while adjusting.                           | 5    |
|                                     | Is the seat height in the lowest position?                                  | The seat cannot be lowered beyond the lowest position.                   | 5    |
| The seat slide lever does not work. | Are you sitting on the seat when adjusting the seat depth?                  | Adjust the seat depth while not seated on the seat.                      | 6    |
| The backrest does not recline.      | The dial on the bottom right of the seat is locked.                         | Turn the dial counterclockwise, and lean against the backrest.           | 7, 8 |
|                                     | The reclining tension adjustment dial is set to the strong (back) position. | Turn the reclining tension adjustment dial to the weak (front) position. | 9    |
| Casters do not move smoothly.       | Are they tangled with lint or wool?   | Remove lint or wool or replace the casters.                              | *    |
| Casters are slippery.               | Are you using urethane casters on hard floors such as a plastic tile floor? | Use soft casters.  | *    |
| Chair makes noise.                  | -   | Visit a retail shop or the nearest branch.                               | *    |

\* Please contact an official dealer.